

105U-1-5W wireless extension I/O installation guide



NOTE

Refer to the user manual for important regulatory and safety information before installing and using this product.

CAUTION

For continued protection against risk of fire, replace the module fuse only with the same type and rating.


Statutory requirements

EC: Unlicensed operation limits the radio power. High gain aerials may only be used to compensate for cable losses.

Antenna installation

Use Figure 1 as a guide for installing an antenna and attaching it to the module.

Figure 1. Antenna Installation

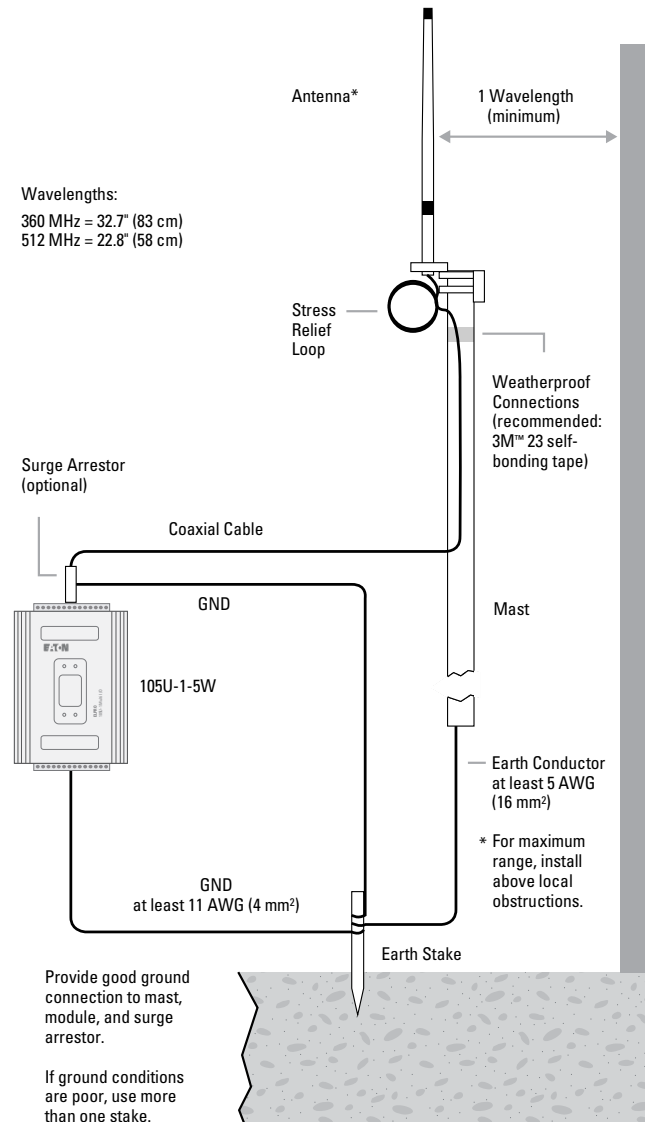

Powering Business Worldwide

Installation

Choose a power supply option:

- 12–24 Vac, 2.0A CSA certified Class 2
- 15–30 Vdc, 2.0A CSA certified Class 2
- 11–15 Vdc supply or battery
- Solar panel with solar battery

After choosing a power supply option, wire the module as shown in Figure 2.

Note: All I/O must be SELV.

① Digital outputs are relay contacts. For ratings see your product user manual. For AC supply, use 10 nF 250V surge capacitor. For DC supply, use bypass diode.

② Analog outputs are either loop powered or externally powered. Output loops are earthed (not floating).


When the wiring is completed, connect the module to a computer (PC) and configure it using the configuration software. For details, refer to the user manual.

Before operating the module, read the sections on operation and configuration in the user manual to take advantage of all product features.

WARNING EXPLOSION HAZARD

Do not disconnect while circuit is live unless area is known to be non-hazardous.

Figure 2. Wiring Diagram

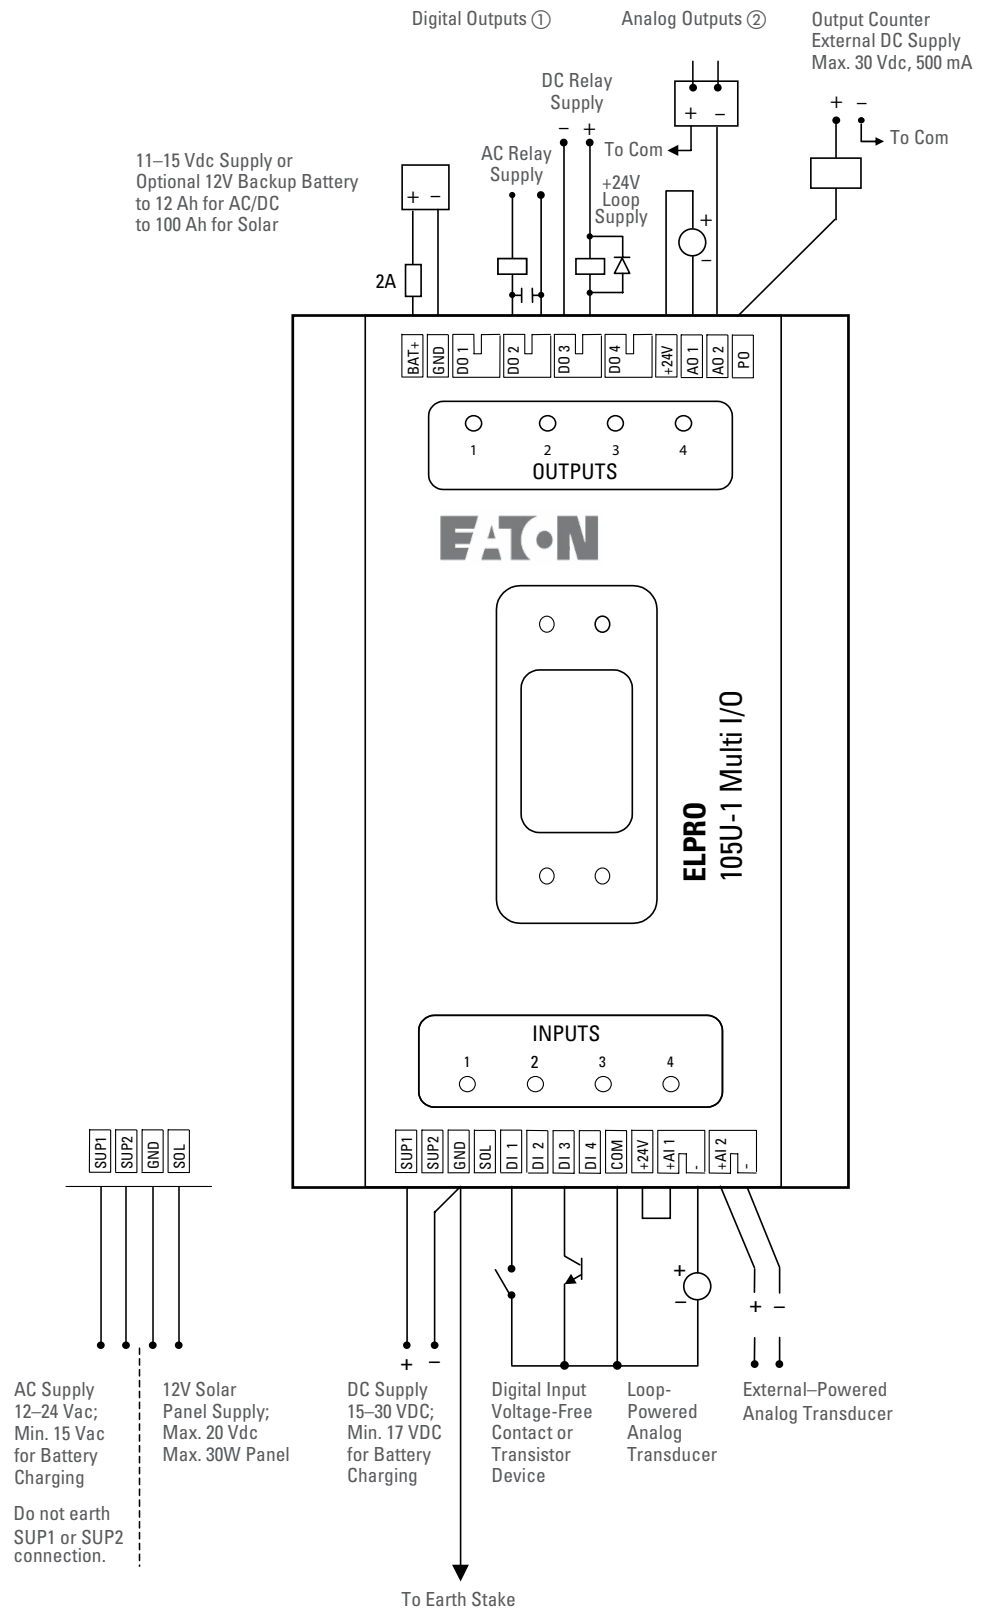

Eaton
1000 Eaton Boulevard
Cleveland, OH 44122
United States
Eaton.com

Eaton's wireless business
www.eaton.com/wireless

© 2014 Eaton
All Rights Reserved
Printed in USA
Publication No. IL032002EN
November 2015

Eaton is a registered trademark.

All other trademarks are property of their respective owners.